

ASKOMA ASKOHEAT-F+ 2.0

**19 levels** 

### 012-6851

### Flange heater Ø 240 mm Including control unit

AHF240-TI-plus...

With combination of temperature control, safety temperature limiter and power switching unit for photovoltaic system, incl. seal

#### PV own power consumption (Power to Heat)

- Controllable via Modbus-TCP via LAN ٠
- Controllable via Modbus-RTU via RS485 •
- Controllable via 0-10 V analog signal •
- 19 linear power levels

(F



Application	Auxiliary heating system of drinking water and heating water in photovoltaic systems.				
	To optimise the own consumption of PV energy.				
Features	<ul> <li>FH The heating element is made of three U-shaped heating tubes, each press-fitted into a press-fitting nipple. These are bolted with the immersion tube onto a steel flange.</li> <li>A food-safe plastic disk serves as insulation.</li> <li>The unheated zone is 70 mm for all types.</li> <li>TC Electromechanical temperature control acc. EN 14597, not fail safe.</li> </ul>				
	<ul> <li>STL Electromechanical safety temperature limiter acc. EN 14597, fail safe. If nominal value is reached, the limiter switches and stays locked in this position. Reset is performed manually and is only possible after the sensing element is cooled off by approx. 10 K.</li> <li>Time factor of sensing element acc. EN 14597</li> <li>Operation type TC Type 2 B acc. EN 14597</li> <li>Operation type STL Type 2 BK acc. EN 14597</li> </ul>				
Control unit	The heater is supplied with a control unit, the RC+ housing (Remote Control). All control signals and optional temperature sensors are connected to this control unit. The status of the radiator is shown on the display. Errors, IP address or the heating status can be displayed if necessary. The control unit is connected to the radiator, a 2,9 m connection cable is included.				
Connections	The flange heater is equipped with four connection sockets. All necessary plugs are included in the scope of delivery. After the first connection or commissioning by an electrician, the device can be completely disconnected from the mains and the connection to the control by pulling out the plug.				

Type summary	Туре	Order no.	Power	Connection voltage	Immersion length [EL]
drinking and	AHF240-TI-plus-9.5	012-6851	9.5 kW	(2x) 3x400 V 3L/N/PE	360 mm
heating water	AHF240-TI-plus-11.9	012-6852	11.9 kW	(2x) 3x400 V 3L/N/PE	420 mm
Incoloy 825, 2.4858	AHF240-TI-plus-15.8	012-6853	15.8 kW	(2x) 3x400 V 3L/N/PE	540 mm

Control unit	The ASKOHEAT-F+ 2.0 has an external control unit with display, the ASKOHEAT-RC+.			
	The display of the control unit shows the IP address, the heater status, the temperature in the tank			
	and the current heating power.			

#### **Emergency operation**

The device has a button that can be used to manually switch the full heating output (level 19) on and off at any time. This function is automatically deactivated after 24 hours of continuous operation.

#### Function Modbus-TCP / -RTU

In this function, the device obtains an IP address from a local DHCP server (router). After the device has been integrated into the network, it can be regulated in 19 power levels and the temperature of the sensors can be read out.

The power levels can be controlled via a value 0-19 or via a target value specification (here the **ASKO***HEAT*-*F***+ 2.0** independently selects the appropriate power level).

The Modbus registers are described in a separate document.

The Modbus protocol can be downloaded from our homepage http://www.askoma.com.

#### Power to Heat

The **ASKO***HEAT***-F+2.0** can communicate via its RS485 interface with a smart energy meter installed at the house connection point. If energy is available which is fed into the mains, the heating insert starts to convert the energy into heat at the correct heating power level.

No energy is drawn from the mains or an existing battery for this purpose. All other consumers in the house are supplied with energy first. All other consumers in the house are supplied with energy beforehand. If the self-consumption by other consumers in the house increases, the **ASKO***HEAT*-*F*+ 2.0 regulates back, or switches off completely.

The following energy meters are available for this purpose:

- ASKOMA bidirectional meters RTU and RTU III
- ASKOMA consumption meters RTU II
- Carlo Gavazzi EM340
- Optec ECS M3
- Eastron SDM72D-M
- Alpha-ESS Smart Grid Value
- CHNT DTSU666
- more to follow...

#### Analog mode (0-10 V control signal)

The heating element can be regulated with a 0-10 V signal in 10 power levels. To avoid flickering, a hysteresis of 0.25 V is programmed.

#### Legionella protection

The automatic legionella protection automatically heats up the system daily / weekly or bi-weekly to min. 65 °C. If the temperature of 65 °C is reached within the interval regardless of the legionella protection program, the interval timer starts from this point on again. The parameters can be configured via Modbus or MQTT.

For this function, the connection to a LAN network is necessary.

#### Heat pump requirement

If a heat pump is available, the **ASKO***HEAT***-F+2.0** can be used as an additional heater. The heat pump is controlled via a digital input that activates the full heating output (level 19).


#### **Minimum temperature**

If desired, the **ASKO***HEAT***-***F***<b>+2.0** can ensure a minimum temperature in the storage tank. If a minimum temperature is defined and this function is activated, the unit will automatically reheat if the temperature falls below it. A frost protection function or ensuring a basic temperature can thus be made possible.

#### Low Tariff

If the device is connected to a network with Internet access, it can reach and maintain an adjustable target temperature in a freely selectable time window. If no or little PV energy is available, the storage tank can be reheated at night.

#### Connections

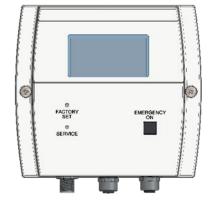

#### ASKOHEAT-RC+

X1 – RJ12 connection socket Interface to heater ASKOHEAT-F+ 2.0

#### X2 – M12 socket for control signals

Switch-on signal oft he heat pump Analog signal 0-10 V EW-lock (digital input) Output signal (5VDC) for circulating pump

**X3 – M12 connector for temperature sensor** Connection options for optional sensors 1 to 4

#### **X4 – M12 connector RS485 interface** Communication via RS485 interface

**X5 – RJ45 socket** Network connection via LAN port

#### Supplied plugs / Connecting cable

**Z1 (A+B) – Power supply heater** Wieland RST 5-pin plug, IP66 Power rating: 250/400 V 25A Screwed contact max. 4.0 mm<sup>2</sup>

#### Z5 / X1 – Communikation

Plug-in RJ12 communikation cabel 2,9 m

X2: cicular connector M12 (female)8-pin (A-coded) with e screw contacts, IP68Connection size: 0.14 mm<sup>2</sup> - 0.5 mm<sup>2</sup> / AWG 26-20

X3: cicular connector M12 (male)
3-pin (A-coded) with screw contacts, IP68
Connection size: 0.14 mm<sup>2</sup> - 0.5 mm<sup>2</sup> / AWG 26-20

X4: cicular connector M12 (male)
8-pin (A-coded) with screw contacts, IP68
Connection size: 0.14 mm<sup>2</sup> - 0.5 mm<sup>2</sup> / AWG 26-20



#### ASKOHEAT-F+ 2.0

**Z1 (A) - mains supply** To supply energy to the heating element and the internal circuit boards


#### Z1 (B) - mains supply

To supply energy to the heating element and the internal circuit boards

Z5 – RJ12 connection socket Interface to control unit ASKOHEAT-RC+




Connection diagram Valid for item: 012-6851 012-6852 012-6853

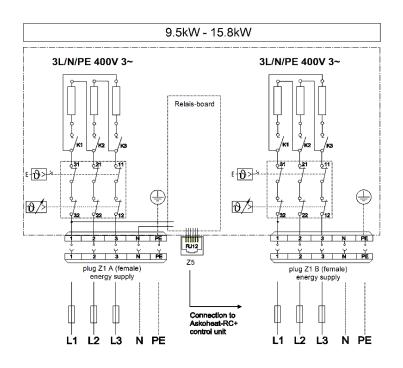

### **Fitting notes** The device must be installed horizontally. The heating tubes must be covered entirely by the liquid. The circulation of the liquid shall not be inhibited.

Please note: This heating element is applicable in stainless steel boilers as well as in black steel / enamelled boilers. Select the settings via DIP switch in the housing interior according to the boiler type.

# Dimension drawing

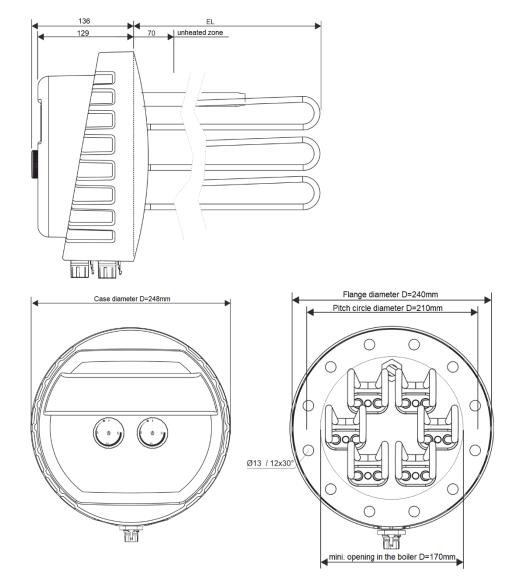

## Temperature sensor

The **ASKO***HEAT-RC+* heating element is capable of evaluating four sensor temperatures. The hot water stratification of the storage tank can be displayed and controlled using these four temperatures. The temperature data can be displayed in the app as the current measured value and can be recorded in the cloud as history data.

Three additional sensors can be connected to the RC-device. The additional sensors must be attached above the heating element. Sensor No. 0 is already included in the flange heater and can be read out.

The 3 sensors can be ordered as optional accessories with the order number 012-0128.

